


## QuickSeeker User Guide

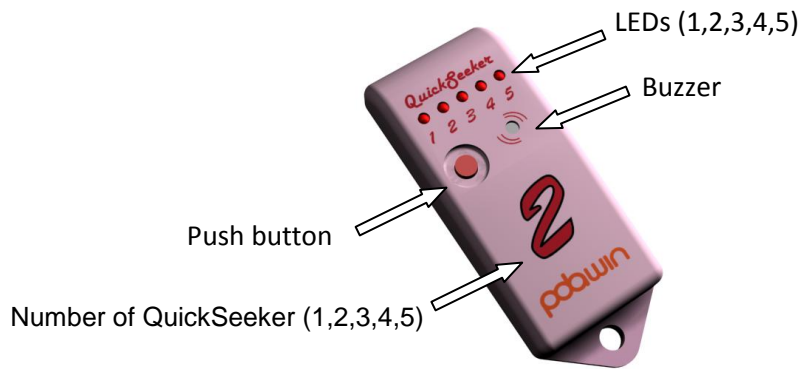

QuickSeeker can be used to find misplaced items such as Keys, Cane, TV Remote, Purse, Eyeglasses, etc.

You can order up to 5 pieces from one set. Pieces are marked with large numbers on the front side of QuickSeeker: 1, 2, 3, 4 or 5. Each piece can be attached to different items, e.g.:

- No.1 - your first set of Keys
- No.2 - your second set of Keys (for car, etc.)
- No.3 - TV remote
- No.4 - your eyeglasses case
- No.5 - your wooden cane

For your family, for your office ...etc. you can also order different groups marked A, B and C. **QuickSeeker with numbers 1 to 5 is designed to find each other only in own group (A, B, C,...).**

For example:

- You will have the A group of 5 pieces (No.1 - No.5)
- Your spouse will have the B group of 5 pieces (No.1 - No.5)
- Your daughter will have the C group of 2 pieces (No.1 and No.2)

Now, when you need to find your items, your wife's or daughter's QuickSeekers will not react to "calls" from your QuickSeekers

*Note:*

Group letters (A, B, C) can be seen on the back side of your QuickSeekers.

### How To Use

Example:

You are holding a TV Remote with QuickSeeker No. 3 attached, you want to locate your car keys which are to QuickSeeker No. 2 attached.

Use the following steps:

- Hold the Push button on No.3 for a few seconds until all 5 LEDs light up
- Press the Push button 2 times (because you want to find No. 2) and LED 2 will light up
- After a few seconds, you can hear short beeps from the buzzer of No.2. Start walking. As you get closer to No 2, more LEDs light up.

- When all 5 LEDs illuminate on No.3, you are very close to No. 2
- When only 1 LED illuminate, you are far away from No.2. Moving closer, LEDs 2 and then 3 and 4 will light up.
- When you find your Keys attached to QuickSeeker No.2, pressing the Push button on QuickSeeker No. 3 will stop Buzzer of No.2

*Notes:*

1. When you are too far away from the item you seek, LEDs will illuminate in endless rotation from 1 to 5
2. QuickSeeker turns off automatically
3. Low battery voltage is indicated by very short blinking off all 5 LEDs during a 3 seconds interval. Please change your coin battery

**Changing the Battery:**

1. Unscrew 2 screws on the back side of QuickSeeker
2. Remove the electronic board from case
3. Replace old battery with new Lithium battery type CR2032 (3V), observing polarity (+ UP)!
4. Put back the electronic board
5. Fasten the 2 screws on the back side of QuickSeeker

**WARNING:** To avoid injury, read all operating instructions and safety information in this guide before using QuickSeeker. Keep this safety information for future reference.

QuickSeeker contains sensitive components. Do not drop, crush, bend, deform, puncture, shred, microwave, incinerate, or insert foreign objects into QuickSeeker. Do not use QuickSeeker if it has been damaged—for example, if QuickSeeker is cracked, punctured, or damaged by water. **Avoiding water and wet locations.**